


## Demounting of Toplift

Chair consists of a conical connection which can be loosened with a rubber mallet or a sledge. (See picture 1 and 2)

**1**

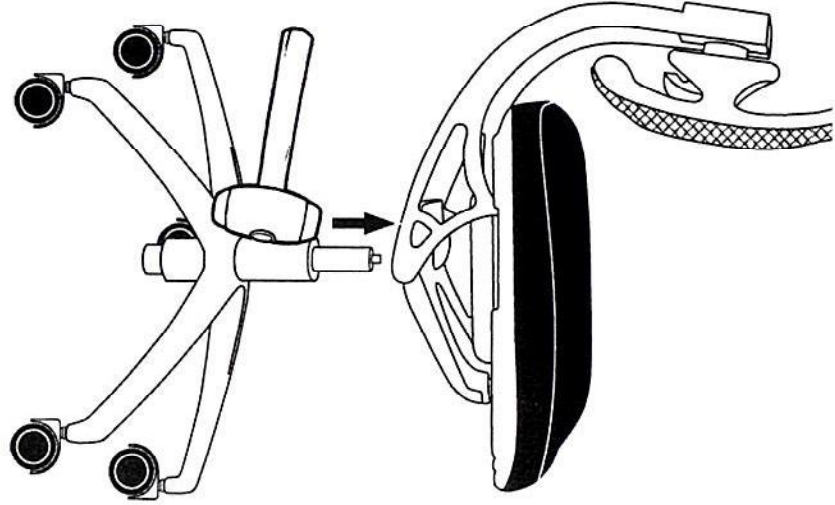


Loosening of the gas lift from the seat. Like shown on picture 1, you have to pound with a rubber mallet or sledge on the metal plate under the seat in order to loosen the plug-in connexion.

Before you start, spray on the plug-in connexion a lubricating grease and let it have effect for a short time.

**2**

**ATTENTION:** If you use a "normal" sledge, please pound carefully on the metal parts. It is even better to underlay a piece of wood/ carton/cloth before you pound.

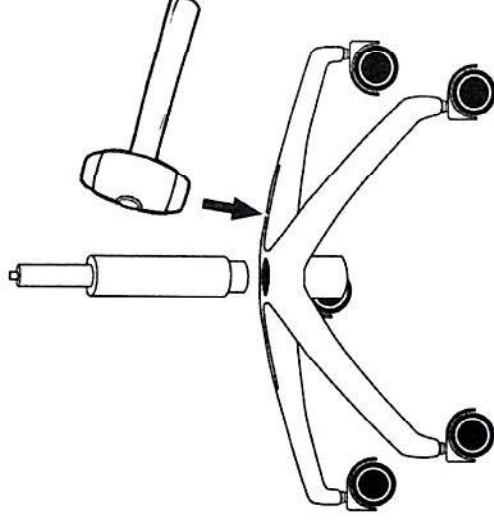

Loosening of the gas lift from the foot base/plate. Like shown on picture 2, please pound rotationally on the foot base/plate in order to loosen the gas lift from the foot base/plate.